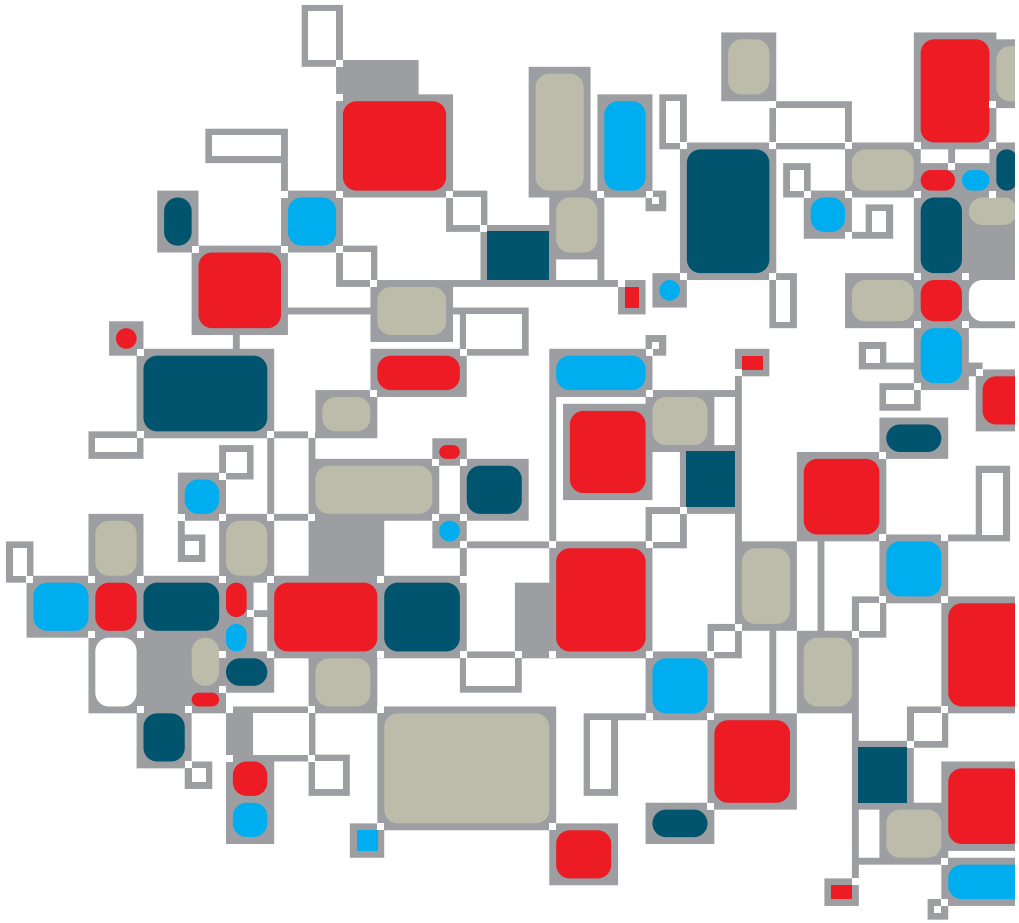

User's Manual
Vodafone Business Connect

power to you

vodafone

Welcome!

The equipment you have received is state-of-the-art and provides multiple possibilities so you can make the most of the services you have chosen.

Discover how you can make the most of your Vodafone DSL Router functions and make your communication even simpler!

Equipment ..... p. 4-6
1. Package contents
2. Vodafone DSL Router illuminated indicators
3. Vodafone DSL Router technical characteristics

Initial installation ..... p. 7-10
1. Installing the device for Internet access service
2. Installing the device for combined fixed telephony and Internet access services
3. Wired connection to a computer
4. Wireless (Wi-Fi) connection to a computer

Basic settings ..... p. 11-14
1. Access to the Settings Tool of the Vodafone DSL Router
2. Display of activated services
3. Settings back up and restoration
4. Changing the password for the Vodafone DSL Router settings

Internet connection ..... p. 15-17
1. Connection via the Vodafone privately-owned network
2. Immediate connection via a mobile telephony network

Function settings ..... p. 18-21
1. Wireless network configuration
2. Setting up a Wi-Fi network
3. Wired Local Area Network (LAN) configuration

Contents

Setting up a local area network ..... p. 22-23
1. Display of connected devices
2. Using a shared printer
3. File sharing

Advanced settings ..... p. 24-27
1. NAT configuration
2. Setting up a DMZ
3. UPnP activation

Technical support ..... p. 28-29
1. ADSL Line status
2. Vodafone DSL Router restart
3. Vodafone technical Support

Safety information ..... p. 30-33
1. For your safety
2. Declaration of conformity

1. Package contents

A complete package contains everything you will need to connect to the services you have chosen:

Vodafone DSL Router device

Power adapter



Ethernet/LAN cables (yellow)

DSL/LINE telephone cables (grey)

ADSL splitter



ADSL filter



2. Vodafone DSL Router illuminated indicators

Wireless connection (Wi-Fi)
Indicator off: The Wi-Fi network is deactivated
Indicator on: The Wi-Fi network is functioning

Device status
Indicator off: There is no power supply to the Vodafone DSL Router.
Indicator on: There is normal power supply to the Vodafone DSL Router.

USB
Indicator on: A device is connected to the USB port.

Telephone lines
Indicator off: The voice service is deactivated (for the respective telephone line).
Indicator blinking: There is an incoming telephone call (to the respective telephone line).
Indicator constantly on: The voice service is activated; you can place a telephone call (from the respective telephone line).

New voice message
Indicator off: There are no messages on the answering machine.
Indicator on: There are messages on the answering machine.

Battery
Indicator on and "Device Status" indicator off at the same time:
The product is operating on battery supply.
Indicator blinking and "Device Status" indicator off at the same time:
The product is operating on battery supply; the battery is almost discharged.
Indicator blinking and "Device Status" indicator on at the same time:
The battery needs replacing.

DSL
Indicator blinking: The ADSL line is synchronizing.
Indicator constantly on: The ADSL line has been synchronized.

Broadband
Red indicator constantly on: A broadband connection has been established.
(Red/blue) indicator blinking: There is a connected and activated Vodafone USB Modem in place.

Equipment

3. Vodafone DSL Router technical characteristics

The ports necessary for installing the device are located on the back of the Vodafone DSL Router.

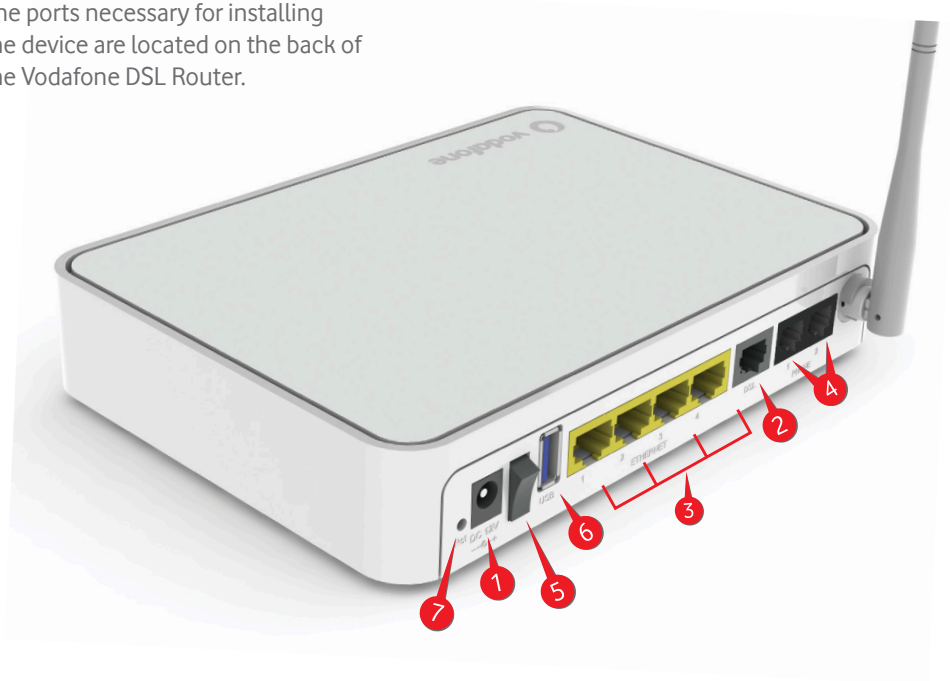

1. Power supply port
2. ADSL line telephone cable connection port
3. LAN/Ethernet network connection port
4. Telephone set connection port
5. ON/OFF button
6. USB port
7. Restart button

1. Installing the device for Internet access service

Connect your equipment to the telephone socket which corresponds to the line on which your Vodafone services have been activated by following the steps described below (it is suggested that you should connect it to the main telephone socket):

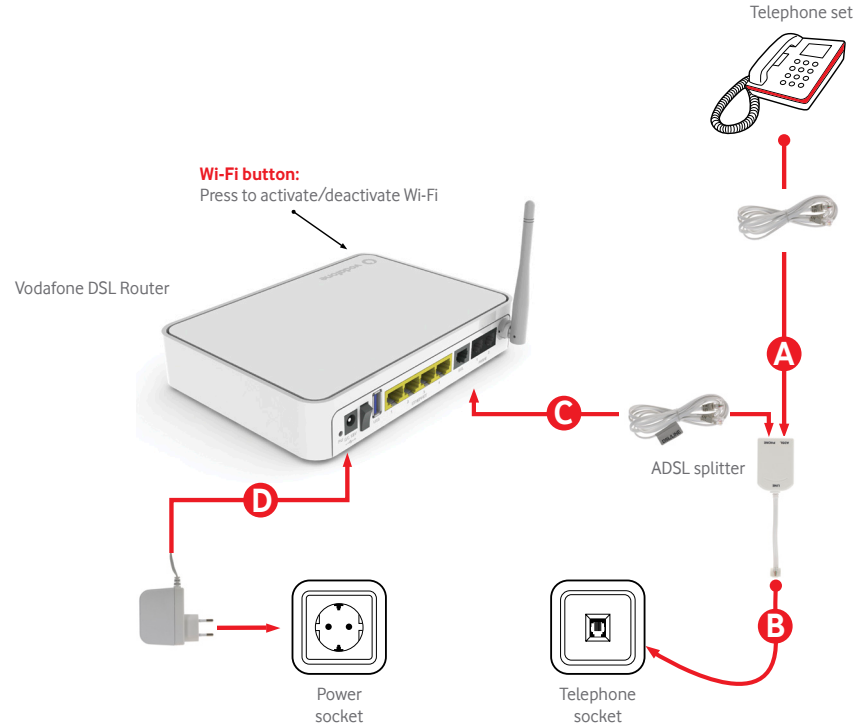

- A Disconnect your telephone set cable from the telephone socket (if there is a telephone set connected to the socket). Insert the telephone set cable into the PHONE port of the ADSL splitter.
- B Connect the ADSL splitter to the telephone socket on the wall.
- C Insert the grey DSL/LINE telephone cable into the DSL port (port 2, p. 6) of the Vodafone DSL Router. Insert the other end of the telephone cable into the DSL (or Modem) port of the ADSL splitter.
- D Insert the end of the power adapter into the correct port (port 1, p. 6) of the Vodafone DSL Router and then to a power supply socket.

Disconnect any duplex telephone sets connected to other telephone sockets. Connect an ADSL filter to each one (like the one contained in the package) by inserting the telephone cable into the PHONE port.
Finally, connect the filters to the respective telephone sockets on the wall. It is suggested that you should connect up to 2 additional telephone sets on the same telephone line.

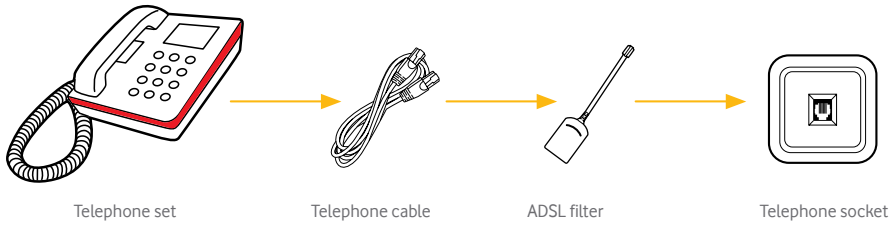

2. Installing the device for combined fixed telephony and Internet access services

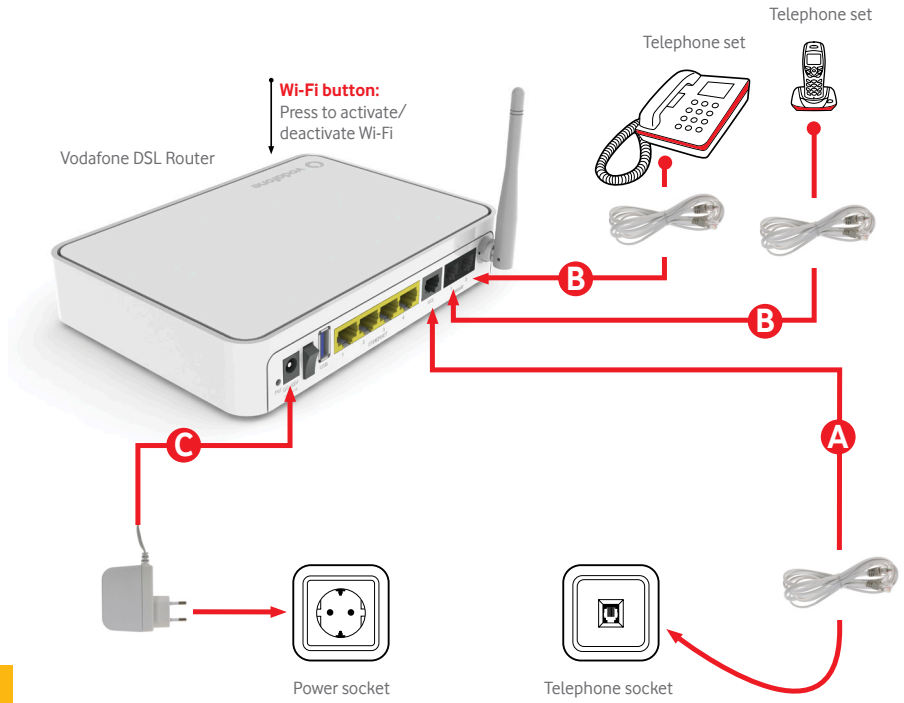

A Disconnect your telephone set cable from the telephone socket (if there is a telephone set connected to the socket). Insert the grey DSL/LINE telephone cable into the grey DSL port of the Vodafone DSL Router (port 2, p. 6). Insert the other end of the cable into the telephone socket on the wall.

B If you have activated the relevant service, connect the 2 telephone sets to the first and second black PHONE ports of the Vodafone DSL Router (port 4, p. 6).

C Insert the end of the power adapter into the correct port (port 1, p. 6) of the Vodafone DSL Router and then to a power supply socket.

The service will still be provided even if the power supply to the Vodafone DSL Router is interrupted. The device is fitted with built-in batteries to ensure its operation for 60 minutes.

3. Wired connection to a computer

You may connect up to 4 computers via Ethernet/LAN cables so that they can communicate with one another and share the same ADSL connection. Insert the yellow LAN cable into one of the 3 Ethernet ports (port 3, p. 6) of the Vodafone DSL Router. Insert the other end of the cable into the Ethernet/LAN port of your computer.

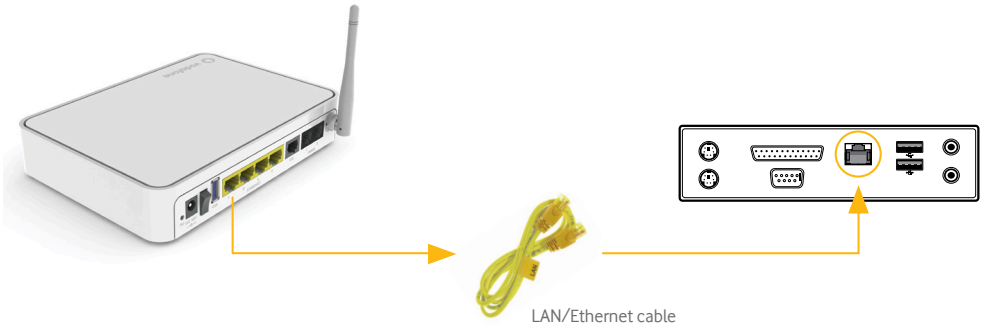

This applies both if you have activated the Internet access service only and if you have activated the combined fixed telephony and Internet access services.

4. Wireless (Wi-Fi) connection to a computer

With the Vodafone DSL Router you may set up a wireless Internet connection for one or more computers, if they have Wi-Fi capability. Both a wireless and a wired connection may be used at the same time.

Initially, turn on your computer's wireless connection (Wi-Fi) by following the manufacturer's instructions. From the list of available wireless networks, choose the one designated as Vodafone-XXXXX, where XXXXX are the last 5 digits of the device serial number printed on the back of the Vodafone DSL Router, in the (S/N) field. Double click to select it. When a dialogue box appears requesting the Wi-Fi Key, enter the WPA alphanumerical key printed on the back of the Vodafone DSL Router.

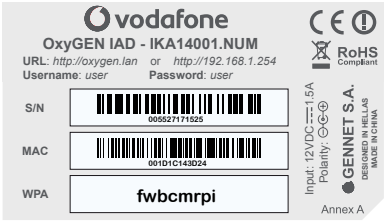

This applies both if you have activated the Internet access service only and if you have activated the combined fixed telephony and Internet access services.

Info

Connect to the Internet immediately, even before your ADSL connection is activated via a Vodafone Mobile Broadband service plan. Just insert the Vodafone USB modem to the special port.

You can find detailed instructions in the "Immediate connection via a mobile telephony network" section (p. 15).

1. Access to the Settings Tool of the Vodafone DSL Router

The following steps will assist you configure your Vodafone DSL Router according to your own needs via the dynamic and interactive Settings Tool.

To access the Settings Tool, set up a (wired or wireless) connection between a computer and the Vodafone DSL Router. Open an Internet browser (e.g. Internet Explorer, Firefox, Safari) and type the URL http://oxygen.lan (or http://192.168.1.254).

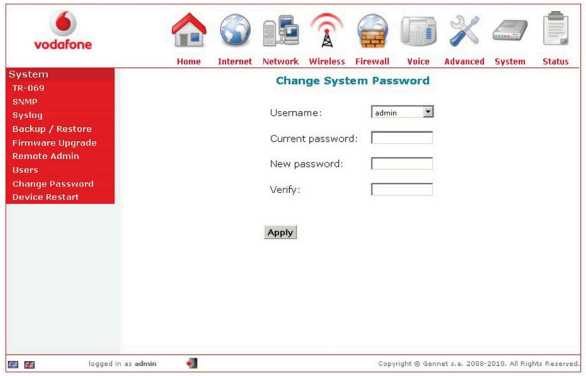

Enter a New password of your choice. Verify your password by reentering it in the "Verify" field below. Select "OK".

You will then be directed to the main Control Panel page of the Vodafone DSL Router.

The password you have set is personal and is not provided by Vodafone. We suggest you keep it for the next time you use the application. If you lose your password, you may restore the custom settings of the Vodafone DSL Router and set a new password. You will find detailed instructions in the "Changing password for the Vodafone DSL Router settings" section, on page 14.

2. Display of activated services

To display the activated services and Vodafone DSL Router functions, select "Home" on the horizontal menu on the Control Panel home page. A window will appear where you can check the various functions of your device (e.g. DSL line status, Wi-Fi, connected computers, etc.).

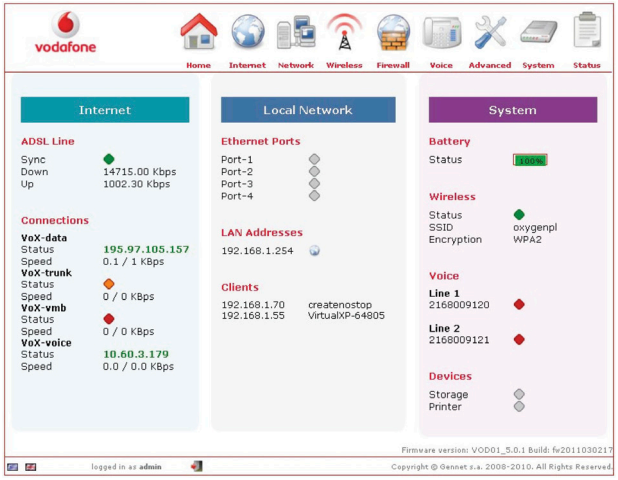

3. Settings back up and restoration

All the configurations you have set on the Vodafone DSL Router can be backed up for future use (e.g. following the device restoration to its initial custom settings).

To backup the settings, select "System" on the horizontal menu, select "Backup / Restore" on the left side menu and then press "Backup".

In the next dialogue box, select "Save". Enter the desired save location on your computer (e.g. in "My Documents") and confirm it by pressing "OK".

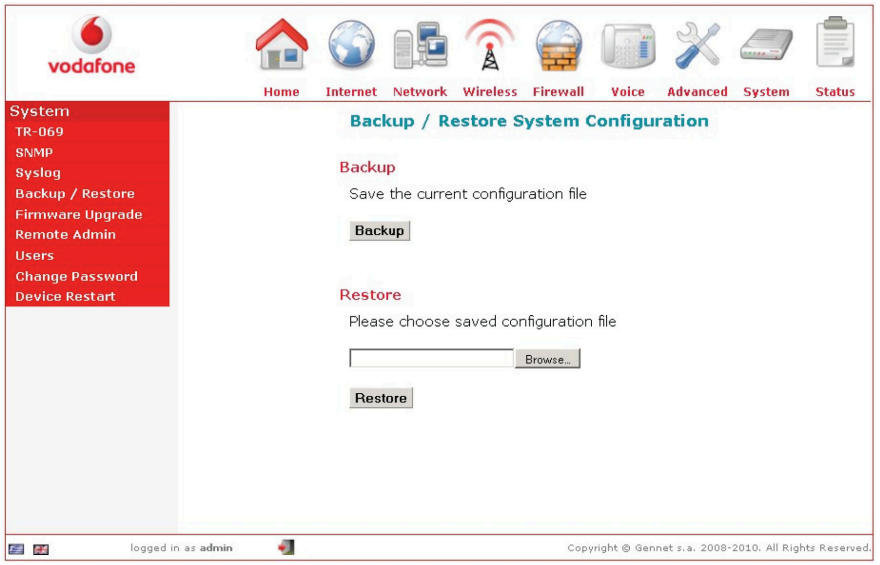

To restore the backed up settings without having to configure every function, visit the "Backup / Restore" section.

In the "Restore" field select "Browse" to find the location where you have saved your configuration file. Click on "Open" and then click on "Restore".

4 Changing the password for the Vodafone DSL Router settings

To change the Current password which you set when you first visited the Settings Tool, select "System" on the horizontal menu and then select "Change password" on the left side menu. Enter the Current password and then enter the New password. Verify your password by reentering it in the "Verify" field below. Select "Apply".

If you misplace/forget your initial password, but also if you wish to restore the custom settings of your device, keep the "Reset" button on the back of the Vodafone DSL Router (7, p. 6) pressed for 10 seconds. By resetting, you will lose all the settings you may have chosen. As soon as the reset is complete, reconfigure the Vodafone DSL Router either by using the configurations you have backed up (see detailed instructions in the "Settings back up and restoration" section, p. 13) or configure each function separately.

The Vodafone DSL Router supports 2 different Internet connection modes depending on the type of access you have chosen:

- ADSL: Access via the Vodafone privately-owned network
- Vodafone Mobile Broadband: Internet access via a mobile telephony network (3G/HSDPA)[1].

1. Connection via the Vodafone privately-owned network

Where Internet access is provided via the Vodafone privately-owned network (LLU), you have an ADSL connection and no additional settings are required on your part. No passwords are required either.

The first time you connect your equipment, the Vodafone DSL Router may be reset automatically to upgrade its Firmware. The process takes approximately 10 minutes and must be completed before you proceed with any other action.

2. Immediate connection via a mobile telephony network

With the Vodafone DSL Router you can connect to the Internet immediately, even before your ADSL connection is activated. You must simply request the activation of your computer (desktop or laptop) Vodafone Mobile Internet service and use the special Vodafone USB modem to access the Internet via the Vodafone mobile telephony network (3G/HSDPA).

To insert the special SIM card into the Vodafone USB modem, remove the cover and place the SIM card in the special slot. Follow the relevant instructions included in the Vodafone USB modem package.

Connect the USB modem to the Vodafone DSL Router by inserting it into the USB port on the back of the device (6, p. 6).

[1] Requires the activation of the relevant Vodafone service. Ensure the service has been activated.

To configure the Internet connection via the mobile telephony network, select "Internet" on the horizontal menu and then select "External modems". On the page that appears, select "New scan".

The scan performed to find the new Vodafone USB Modem may take 1 to 2 minutes. Wait until your Vodafone USB modem appears on the list of available external modems. If a PIN is required for its operation, — orange icon in the "Status" column — press the "Edit" icon on the "Action" column. Enter the PIN in the "Modem PIN" field and then select "Apply". You will return to the page displaying available external modems automatically. Click "Refresh" and make sure that the Vodafone USB Modem status icon has turned green.

Under the custom Vodafone USB modem operating mode, you can connect and hang up manually. If you wish to activate the connection via the computer (desktop or laptop) Vodafone Mobile Internet services, select "Dial". To verify that you have Internet access as well, select "Home" on the horizontal menu on the Control Panel home page. You may control your connection status (VoX-vmb) on the window that appears. When, however, you wish to disconnect, return to the page displaying the list of available external modems and select "Hangup".

The Vodafone USB Modem can also function as an automatic backup Internet connection in the event of the ADSL line being disconnected. Keep your Vodafone USB modem connected to the Vodafone DSL Router, select "Auto" as "Backup Operation" method and press "Apply".
If your ADSL line is disconnected temporarily, the backup connection will be activated automatically via the computer (desktop or laptop) Vodafone Mobile Internet service . As soon as your ADSL connection is back on, it will be used for Internet access automatically.
If you do not wish the backup connection option, we suggest you do not keep the Vodafone USB modem connected to the Vodafone DSL Router.

Info

Enjoy fast Internet access anywhere, whenever you need it! The Vodafone USB modem may be connected directly to any computer. You can thus have broadband Internet access via the Vodafone Mobile Broadband service plan, with the option of a portable wireless connection which can also be used outdoors.

* You must have the relevant service activated by Vodafone.

1. Wireless network configuration

To configure the wireless connection between the Vodafone DSL Router and your computer or other wireless devices, select "Configuration" on the "Wireless" horizontal menu.

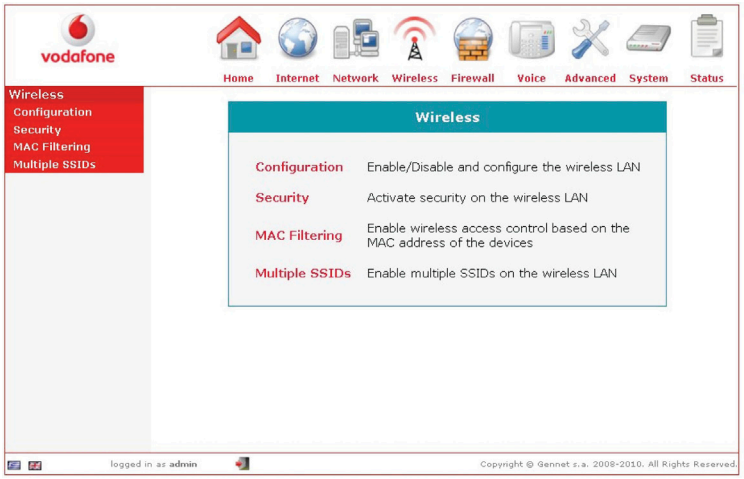

The Vodafone DSL Router supports the Wi-Fi 802.11n standard (default setting) for high performance wireless connection and is also compatible with the 802.11 b and 802.11 g standards.

Unless changes are made to the Vodafone DSL Router custom settings, the optimum Wi-Fi will be chosen automatically. You can, however, select another channel manually.

The Vodafone DSL Router is capable of setting up a Wi-Fi network by using different encryption standards (WEP, WPA or WPA2). When the Wi-Fi Key is requested, enter the WPA alphanumerical key printed on the back of the Vodafone DSL Router.

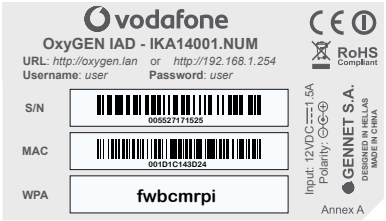

2. Setting up a Wi-Fi network

The custom wireless network encryption standard is WPA/WPA2; however, you may change it to WEP, WPA or WPA2. You may also choose your own password and enter a new alphanumerical code (ASCII characters) in the relevant field. The more alphanumerical characters you use the more secure your Wi-Fi network will be against possible connections by unknown devices.

By selecting "Off" in the "Security" section, you will make the Wi-Fi network open and accessible to other devices without the use of a password. This may lead to the unwelcome and even harmful use of the Vodafone DSL Router and the ADSL line by unknown persons.

If you wish, you may change the name of your Wi-Fi network by entering a new name in the "Network name" field. By selecting "Off' under "Broadcast SSID" on the "Configuration" menu, you may hide your Wi-Fi network identity to achieve an even higher level of security.

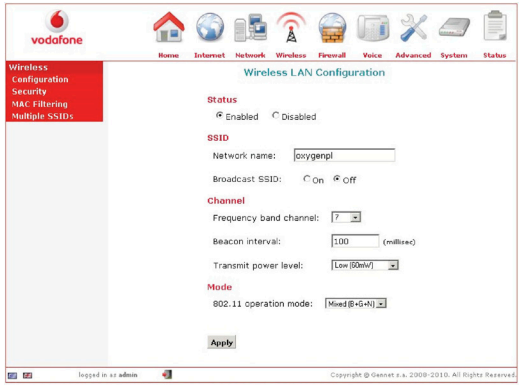

3. Wired Local Area Network (LAN) configuration

The local IP of your Vodafone DSL Router is 192.168.1.254. Any devices connected to it will have an IP address belonging to the "102.168.1 X" network form. Should you wish to change the Vodafone DSL Router local IP address, select "Addresses" on the "Network" menu, whereas to change the address allocation method in your local area network, select "DHCP" on the same menu.

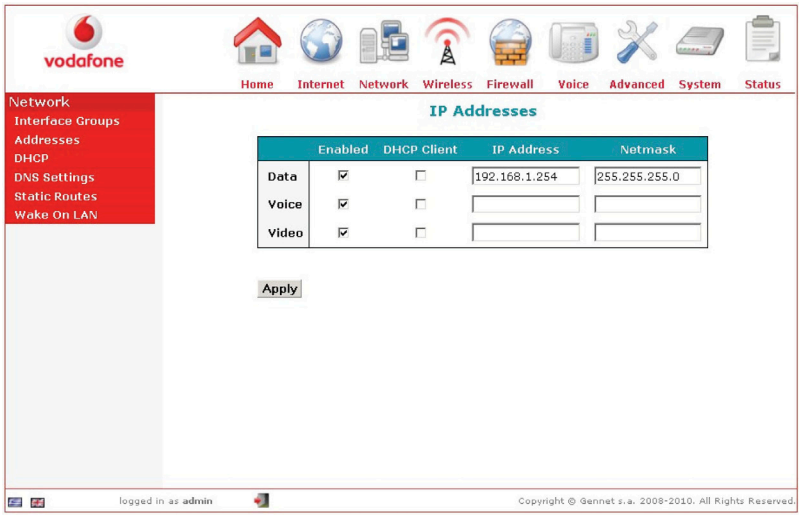

Should you change the Vodafone DSL Router IP address, your connection to the Settings Tool will be lost. To return to the Settings Tool enter the new IP address you have created on the web address.

Info

To further configure the security levels of your local area network, see the "Authorizing programs for Internet access" and "Definition of a DMZ" sections below.

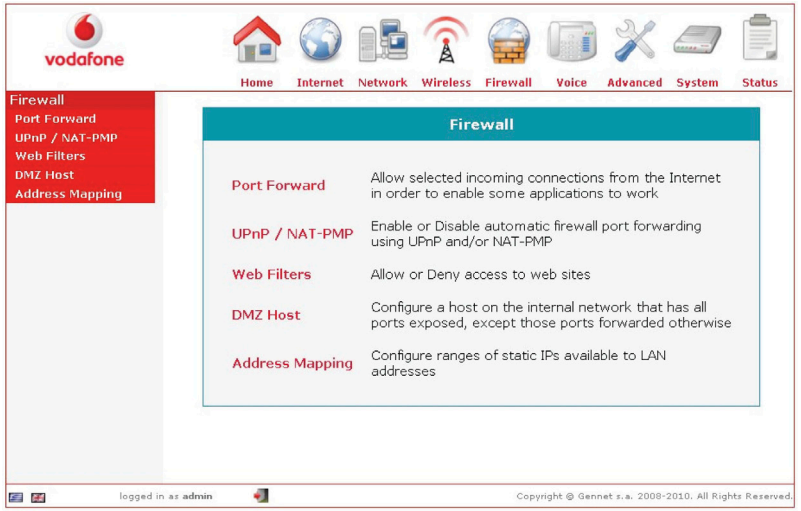

With the Vodafone DSL Router you are able to set up your own local area network and connect any devices to it. Simply connect your compatible device (e.g. printer, external hard disk drive, USB flash drive, etc.) to the USB port of the Vodafone DSL Router.

1. Display of connected devices

On the "Status" menu, under "Interfaces", you may check any linked devices detected by the Vodafone DSL Router: computers and USB devices (such as a storage medium or printer).

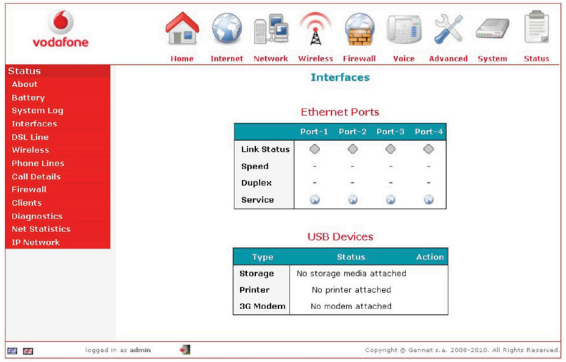

2. Using a shared printer

Connect your printer to the Vodafone DSL Router via a USB cable to the USB port (6, p. 6).

As soon as your printer is properly connected to the Vodafone DSL Router, you may detect it on your computer. Now you can use the same printer from any computer connected to the Vodafone DSL Router.

This function is compatible with a number of printers with a USB connection capability. Scanners and all-in-ones are not compatible with this function.

3. File sharing

Share your files wirelessly with all the computers connected to your local area network. Just connect your external storage medium (e.g. hard disk drive, USB flash drive, etc.) to the USB port of the Vodafone DSL Router (6, p. 6).

In the "Devices" section on the Home Page, you can check the storage medium connected to the Vodafone DSL Router.

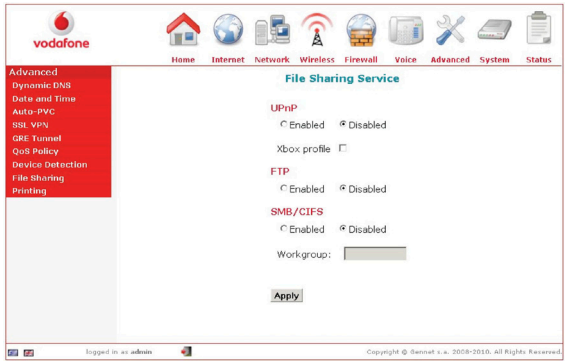

Make sure that your computer is connected to the Vodafone DSL Router. Identify the connected storage medium on your computer. By double clicking the medium, you will have wireless access to the entire content of the medium. Use the same method to make simultaneous use of the files saved by all the computers connected to the Vodafone DSL Router.

1. NAT configuration

The Vodafone DSL Router has a pre-activated "Firewall" to ensure maximum security. Consequently, access is permitted only to outgoing connections. This function may affect certain applications, such as communication tools (e.g. video conferencing, etc.) or server applications (FTP, SMTP).

The "Port Forwarding" option allows any data packets received via the specific TCP/IP port to be transmitted to a specific device on the internal network.

If you wish to have Internet access to a server (web, e-mail, ftp, game server, etc.) on your local area network via a specific port, you will have to set a forwarding rule which will direct any TCP/UDP packets received via the port to the network device. If the server in question has to forward a number of ports, you may set an equal number of different forwarding rules or a range of successive ports under the same rule.

For a example, if you want to have Internet access to a web server with the IP address 192.168.1.2 on your local area network, you will have to set a forwarding rule which will redirect any TCP packets received by the Vodafone DSL Router via port 80 to the device with the IP address 192.168.1.2.

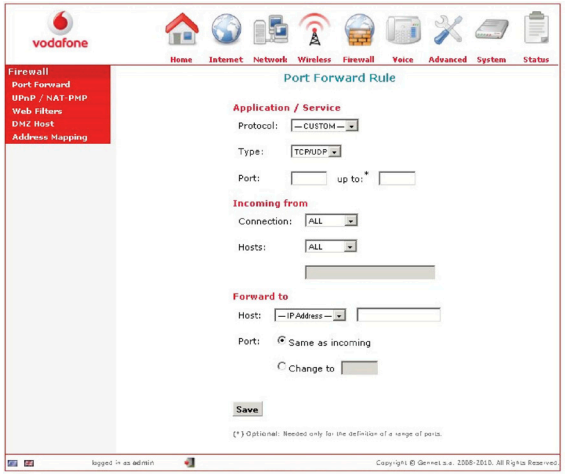

To configure "Port Forwarding" rules on your Vodafone DSL Router:

- Select "Port Forwarding" in the "Firewall" section on the horizontal menu.
- Select "Add new" to create a new rule.
- Choose your preferred application from the dropdown menu.
- If you are unable to find your preferred application in the list, you may set it by choosing "Custom" and entering the protocol type (TCP or UDP) and the port number used for data packet forwarding.
- Set the IP address on your local area network and, optionally, the destination port if you want it to be different from the one entered in the fields used to set the "Application". The request will be forwarded to this "Private address".
- Select "OK" to save the settings.
- Repeat the process for any application you want to exclude from the "Firewall".

2. Setting up a DMZ

Select "DMZ" on the "Router" menu for the following settings.

The DMZ zone allows you to expose a device to the Internet without any restriction regarding which ports will be used. It allows you to open any ports that have not been set already (via "Port Forwarding") to a single device on the local area network:

- Click "Enabled" to activate this option
- Enter the IP address of the device to be included in the DMZ zone
- Confirm it by selecting "Apply"

Caution: The local computer defined as included in the DMZ zone is no longer protected by the pre-activated "Firewall" of your Vodafone DSL Router, since every incoming Internet connection will be forwarded to it automatically.

3. UPnP activation

Select "UPnP" on the "Advanced" menu for the following settings.

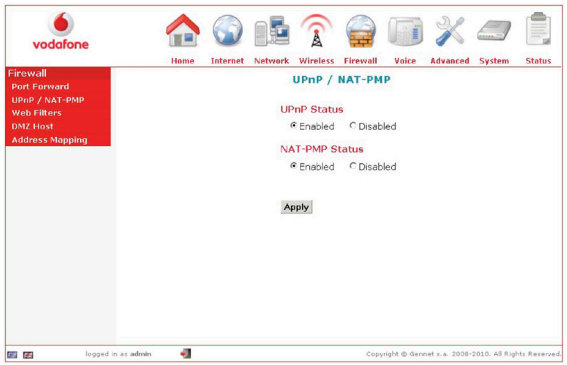

The UPnP IGD option allows certain applications to set the port forwarding NAT settings automatically. The UPnP AV option is used by other UPnP terminals for the shared use of multimedia files stored on a disk or USB flash drive which is connected to the Vodafone DSL Router.

1. ADSL Line status

The "Status" section on the horizontal menu enables you to monitor technical information about the status of the Vodafone DSL Router functions, such as the interfaces or ADSL line.

The "DSL Line" function in the "Status" section enables you to display technical information about your ADSL line status.

If the current status is "Idle":

- Check the connections and make sure that the Vodafone DSL Router is properly connected.
- Click "Retrain".
- If the problem is not resolved, contact Vodafone to verify that your ADSL connection has been activated and is operating correctly.

2. Vodafone DSL Router restart

To restart the Vodafone DSL Router, select "Restart" in the "System" section. The configurations you have selected on the Vodafone DSL Router will be kept if you have not selected "Erase Configuration", which restores default settings. Alternatively, to reset and restore default settings, press the "Reset" button on the back of the device.

If the DSL/Internet indicator is not blinking (see p. 5), use the "Restart" function. If the problem persists, contact Vodafone Technical Support, any time.

3. Vodafone Technical Support

We are here for you on a 24/7 basis to assist you with any problem that may occur. For technical support, contact the Vodafone Corporate Customer Care Department by calling 1399 (free of charge from you Vodafone mobile).

Info

For more information on the activation of Vodafone services, visit www.vodafone.gr/business

The screenshots included in this guide may differ from those on the end product. To obtain the latest version of the User Guide, visit www.vodafone.gr/business

1. For your safety

Read the following instructions carefully. Failure to comply with these instructions can be dangerous and/or illegal. You are solely responsible for how your Vodafone DSL Router is used and for the consequences of its use.

Do not activate the product in places where the use of wireless products is prohibited or where it can cause interference or hazards.

Read the "Safety information" section

Do not use the device at refueling stations

The device may generate intense or flashing light

Do not rely on this device for emergency communications

Maintain a distance of at least 20 cm from the Vodafone DSL Router

Do not dispose of the device in fire

Small parts may cause chocking

Avoid contact with magnetic media

The device may generate intense noise

Avoid extreme temperatures

Keep the device away from pacemakers and other individual medical devices

Avoid contact with liquids Keep the device dry

Deactivate the device when asked to do so in hospitals and medical facilities

Do not try to disassemble the device

Deactivate the device in explosive environments

Use only authorized accessories

This product is recyclable. Dispose of it appropriately

Radio frequency exposure limits
To avoid the possibility of exceeding the radio frequency exposure limits, you, or anybody else who is around, must be at least 20 cm away from the aerial linked to the Vodafone DSL Router.

Young children
Keep the Vodafone DSL Router and its components out of reach of children and do not allow children to play with the router. They may be injured, cause injuries to others or damage the Vodafone DSL Router. The Vodafone DSL Router includes small, pointed parts which can cause injuries or become detached and cause chocking.

Interference
The Vodafone DSL Router includes a transmitter and a receiver. When on, it receives and transmits radio frequency energy. You must be careful when using the Vodafone DSL Router very near individual medical devices, such as pacemakers and hearing aids. All wireless products are sensitive to interference which may affect their performance. The Vodafone DSL Router is designed for operation at a distance of at least 20 cm from any individual. Failure to comply with this instruction may lead to exposure to radio frequency energy in excess of the limits set forth in relevant directives.

Pacemakers
Pacemaker manufacturers suggest that a pacemaker should be at least 15 cm away from a wireless device to avoid possible interference between the device and the pacemaker.

Hearing aids
Hearing aids or other cochlear implant users may experience noise interference when using, or being close to, wireless devices. The level of interference depends on the type of the aid and the distance from the source of interference. You may reduce interference by moving further away from the source. Consult your hearing aid manufacturer for alternative solutions.

Medical devices
To find out whether the Vodafone DSL Router could affect the operation of your medical device, consult your doctor and the device manufacturer.

Hospitals
To prevent possible interference with sensitive medical equipment, deactivate your wireless device when requested to do so in hospitals, clinics or health facilities.

Explosive environments
Where there is a possible explosive atmosphere, you must comply with all posted instructions and must, upon request, deactivate the Vodafone DSL Router or any other wireless device. Areas with possible explosive environments are refueling stations, spaces under boat decks, fuel or chemical transportation or storage facilities, as well as areas where the air contains chemicals or particles (such as grains, dust or suspended metallic particles).

Explosion areas
To avoid causing interference with explosion operations, you must deactivate the Vodafone DSL Router when you are in explosion areas or in areas where there are signs instructing you to deactivate "two-way wireless devices" or "electronic devices". Watch out for warnings, comply with restrictions and observe all the rules

- DO NOT use this product near water, for example in a damp basement or close to a swimming pool.
- DO NOT expose the device to moisture, dust or corrosive liquids.
- DO NOT place objects on the device.
- DO NOT install, use or maintain the device during a storm. There is slight risk of electrocution.
- Connect ONLY approved components to the device.
- DO NOT open the device or unit. If you open or remove the covers, you may be exposed to dangerously high voltages or other hazards. ONLY specialized and knowledgeable technicians should service or disassemble the device. Contact your supplier for more information.
- Make sure that you have inserted cables into the correct ports.
- Place the connection cables carefully to eliminate any possibility of somebody stepping or stumbling on them.
- Make sure that you have disconnected all cables from the device before you take it for servicing or disassemble it.
- Use ONLY an appropriate power adapter or cable for your device.
- Connect the power adapter or cable to an appropriate power supply line (e.g. 110V AC in Northern America or 230V AC in Europe).
- DO NOT let anything come into contact with the power adapter or cable and DO NOT place the product in a place where somebody could step or stumble on it.
- DO NOT use the device if the power adapter or cable is damaged. There is a risk of electrocution.
- If the power adapter or cable is damaged, disconnect it from the power socket.
- DO NOT try to repair the power adapter or cable. Contact your nearest supplier and buy a new one.
- DO NOT use the device outdoors and make sure that all connections are located indoors. There is slight risk of electrocution.
- DO NOT block the device ventilation openings. Insufficient air flow may damage the device.
- Use only a telecommunications cable no. 26 AWG (American Wire Gauge) or a cable of a higher cross section.
- Aerial warning! This device complies with the ETSI and FCC certification requirements when used with the accompanying aerial(s). Use only the accompanying aerial(s).
- If you mount the device on the wall, make sure not to cause any damage to power, gas or water lines.
- DO NOT expose the battery to excessive heat or a naked flame.
- DO NOT immerse the battery in water.
- DO NOT subject the battery to strong blows or let it come in contact with water droplets.
- DO NOT disassemble or modify the battery for any reason whatsoever.
- DO NOT keep the battery discharged.
- Charge the battery at temperatures ranging between 0°C and +45°C.
- DO NOT store the battery with less than 50% of its original capacity or at a temperature other than specified.

Appropriate disposal of the product
(Electric & electronic equipment waste)

The signs affixed on the product or its accompanying manuals indicate that it should not be disposed of with other domestic waste when its life cycle is over. To help prevent possible health or environmental hazards (due to uncontrolled waste disposal), and assist the sustainable reuse of material resources, please, separate it from other types of waste and recycle it. Domestic users should either contact the shop where they bought the product or local services to find out where and how they can deliver the product for environmentally safe disposal. Corporate users should contact their suppliers and check the terms and conditions laid down in their purchasing contracts. This product should not be mixed with normal waste.

2. Declaration of conformity

Vodafone-Panafon Hellenic Telecommunications Company hereby states that this Vodafone DSL Router complies with the essential requirements and other relevant provisions of Directive 1999/5/EU.
It also complies with the standards established by the following:
EN300328V1.6.1 (2004-07), EN301 489-01 V1.4.1 (2002-08), EN301 489-17 V1.2.1 (2002-08), Safety EN 60950-1:2001. In accordance with the provisions of Directives 89/336/EEC, 92/31/EEC, 93/68/EEC, 99/5/EEC and LVD 73/23/EEC. FCC approved
Declaration of Interference in accordance with the requirements of the Federal Communications Commission (FCC)
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must withstand any interference received, including interference that could cause undesired operations.

RoHS COMPLIANT 2002/95/EC CE

CE: RE980106H01
SAR: RM980106H01

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Section 15 of the FCC regulations. These limits are designed to provide reasonable protection from harmful interference in residential installations. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the distance between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit other than that to which the receiver is connected.
4. Consult the retailer or an experienced radio/TV technician for assistance.

Radiation exposure statement in accordance with FCC requirements

- This transmitter must not be located or operate in conjunction with any other antenna or transmitter.
- The IEEE 802.11 b or 802.11 g function of this product in the USA is restricted by the firmware to channels 1 to 11.
- Compliance to FCC requirements on exposure to radiofrequencies, demands that there must be a minimum 20 cm distance between the device antenna and any persons near it.

1-3 Tzavella St., 152 31 Chalandri
Tel.: 210 67 02 000, 210 67 03 000 Fax: 210 67 03 200
CUSTOMER CARE DEPARTMENT
1399 (free of charge from Vodafone mobiles),
80011 127127 (free of charge from landlines)

vodafone